




# Standard Waterproofing Procedures for Modern Railing Hardware

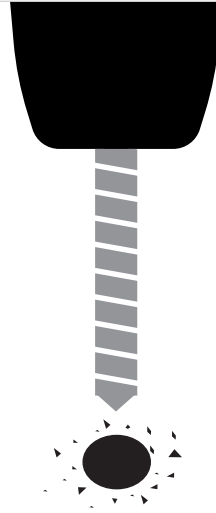


1. Drill the hole.

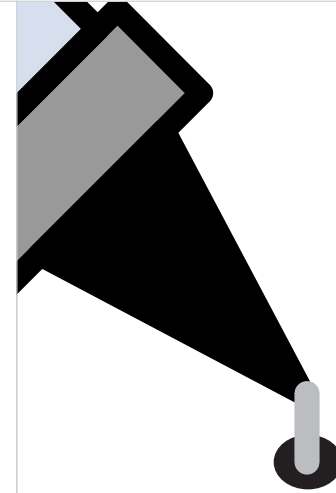


2. Fill the hole with special GE Advanced Silicon Caulk (shrink and crack proof).

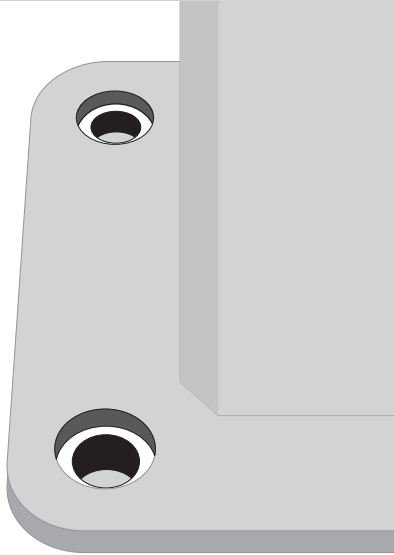

3. Position the hardware in place.

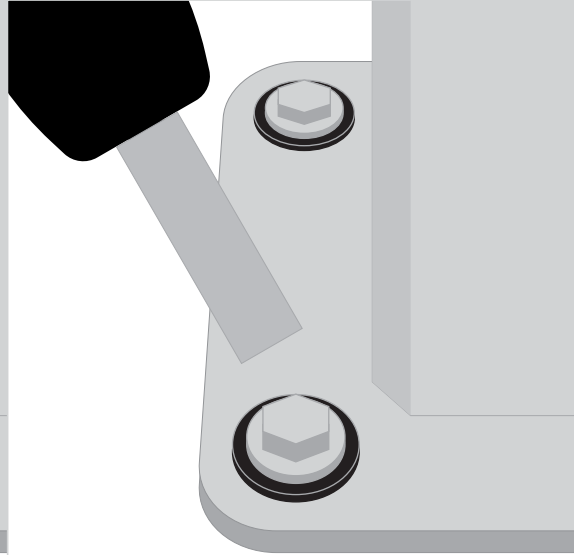

4. Add a special sealing rubber washer before the hex flange head lag bolt.

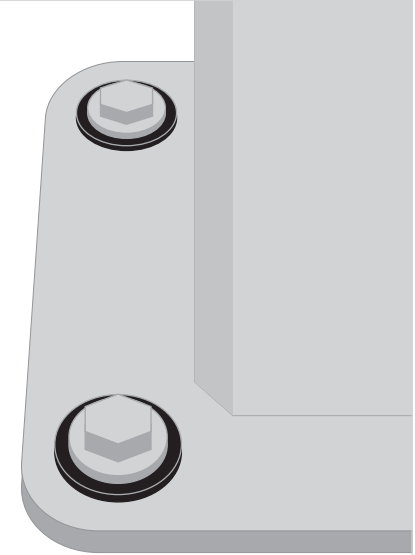

5. With the screw tight in place, caulking overflows and seal the insertion completely.